

GL1800 SATNAV Software update

1. With the ignition 'OFF', open the satnav cover lid (in the boot). Locate the small lever at the top of the CF Card and eject the Card by pushing the lever in. Note that the small ridge at the top of the card faces towards the front of the bike.

2. Line up the new card in the slot (with the ridge facing to the front) **but don't push it into position yet**. Turn on the ignition using position 2 (ACC) to avoid having to run the engine and this will get rid of the "Open Cover" warning you receive for the boot being open.

3. Wait for a screen to appear on the SATNAV asking you to press the ENT button.

DO NOT PRESS 'ENT' !!! YET

4. Gently press the new card into the slot until the card is fully located and the top of the card sits level with the small ejector lever. You can now close the cover and the boot lid.

5. The SATNAV screen will eventually change and a message will appear saying "**loader**" (Be patient as this may take a few minutes to start). The message will change to "**updating from card**". This message will disappear after the update is complete.

DO NOT SWITCH OFF IGNITION DURING THE UPDATE.

6. Once the update is complete, the SAT NAV should restart normally and will then find and load the new map. Press 'ENT' when asked to continue as normal.

Note:

To check the new software version is installed, press MENU, then Setup/Info and then info/System to see your new software version and installed map details.